


## ShelfTrack™ Installation Instructions




### 1. Use the Right Hardware


Select hardware that is right for your wall type:

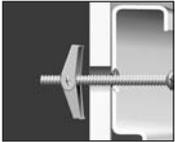

**Drywall:** Drill 1/2" holes and secure to the wall with toggle bolts.

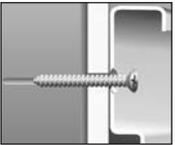

**Studs:** Secure to the wall with #12 x 2" pan head screws at stud locations.

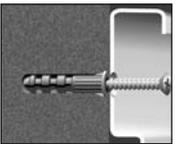


**Concrete:** Drill 1/4" holes, insert #12 wall anchors and secure to the wall with #12 x 2" pan head screws.

### 2. Hang Track Location

Track can be installed at any height. However, for maximum adjustability and strongest installation, install Track flush to ceiling and screw into wood header behind wallboard. Stud installation is recommended whenever possible for the strongest installation.

### 3. Determine Length and Spacing of Standards

Standards are available in several lengths, depending on the number of shelves you want and the spacing between the shelves. The closer the Standards are placed together, the stronger the installation. Standards should be spaced no more than 24" apart, and no more than 4" from the end of the shelf.

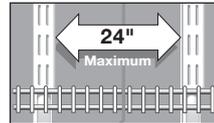

### 4. Securing Standards

Each Standard must be secured to the wall with one screw at the closest hole to the center of the Standard. When using toggle bolts, remove toggle, put bolt through Standard and re-attach toggle to bolt before placing Standard on track.



### 5. Attaching Brackets

Attach brackets at desired shelf height.

**Note:** Always match bracket size to shelving depth except when using Shelf & Rod™ shelving. For this type of shelving, always use 12" brackets.

### 6. Cutting Shelving, Closet Rods, and Hang Tracks

Wire shelving can be cut using a bolt cutter or hacksaw. Closet Rods can be cut using a pipe cutter (recommended) or a hacksaw. Hang Tracks can be cut with a hacksaw.

### 7. Corners

When two shelves come together in a corner, use a Corner Shelf Support to connect them. Use a Corner Closet Rod to allow clothes to slide uninterrupted around corners. **Note:** SuperSlide® Closet Rod Supports should be placed where Closet Rods join.




### 8. Shelf Caps/Closet Rod Caps

Shelf Caps should be placed on the cut ends of shelving to protect clothing. Closet Rod Caps should be placed on the ends of Closet Rods to keep hangers in place.




## Fixed Mount Installation Instructions

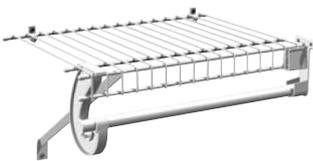

### 1. Shelf Installation


There are two ways to install shelving: Open-ended or wall-to-wall. For both types of installation, shelves are attached to the wall using Wall Clips. Use one every 12". The front of the shelf is supported using Shelf Support Brackets. Use one every 36". If you have a stack of shelves, you can use Shelf Support Posts instead of Shelf Support Brackets. When a shelf meets a sidewall, a Wall Bracket is used on the end to support the front of the shelf instead of a Shelf Support Bracket.

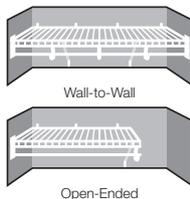

less. Drill 1/4" hole, insert hardware and push in pin using the blunt end of a hammer or screwdriver. Do not punch holes or hammer pins into wall.

**Wood Studs:** Cut attached anchor off ClosetMaid Wall Clip and secure to the wall using a #8 x 1" screw into the stud.

**Concrete and Plaster:** Drill 1/4" hole, insert separate anchor and secure to the wall using a #8 x 1" screw.

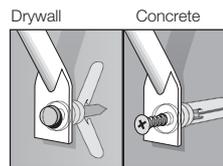


### 3. Corners

There are two types of corner installations.

**(A)** When two shelves come together in a corner, use a Corner Shelf Support to connect them. Use a Corner Closet Rod to allow clothes to slide uninterrupted around corners.


**(B)** Use a Corner Shelf Kit that includes a specially designed Corner Shelf and comes complete with all hardware needed for installation.

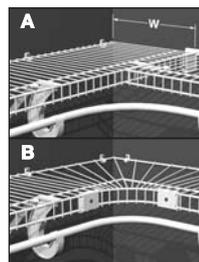

**Note:** SuperSlide® Closet Rod Supports should be placed where Closet Rods join.

### 4. Measuring and Cutting Shelves and Closet Rods

Wire shelving can be cut using a bolt cutter or hacksaw. Closet Rods can be cut using a pipe cutter (recommended) or a hacksaw. For a wall-to-wall installation, cut the Closet Rod and the shelf 1" shorter than the total wall width for proper fit between the Wall Brackets.

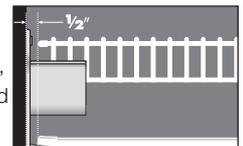

### 5. Shelf Caps/Closet Rod Caps

Shelf Caps should be placed on the cut ends of shelving to protect clothing. Closet Rod Caps should be placed on the ends of Closet Rods to keep hangers in place.

**Note:** When using 16" Shelving to hang clothes, BE SURE TO USE 12"

Support Brackets as shown so the shelf is supported properly and hangers can slide unobstructed.

